

## CAE PERFORMANCE PRODUCTS


7 Main Road Castlemaine, VIC. 3450

T 03 5472 1442

F 03 5472 4111


E info@caenterprises.com.au

W www.caeperformanceproducts.com.au

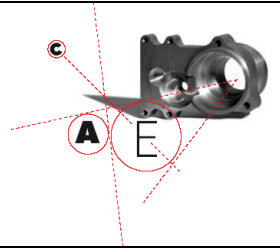

# Customer Instructions

## GENIII LHS Starter Motor (G/R-01/GENIIILHS)

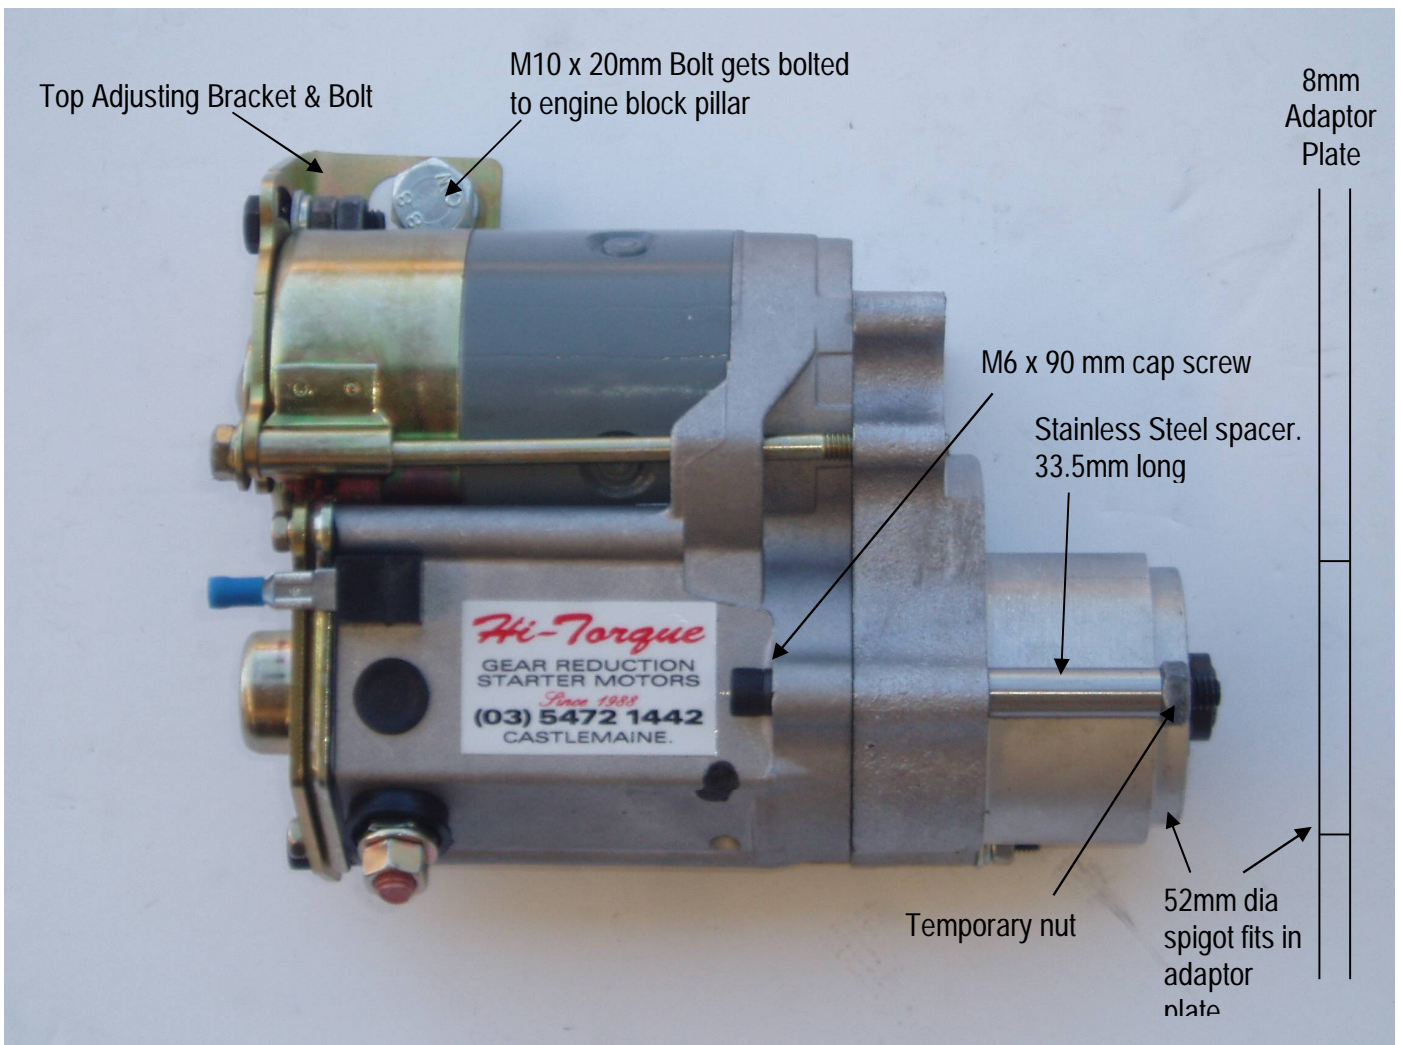

1. Remove the temporary nut on the end of the M6 x 90mm cap screw. Slide Starter Motor into adaptor plate and screw the cap screw into the adaptor plate. Hand tighten temporarily.
2. Attach M10 x 20mm bolt in to top adjusting bracket into the threaded pillar on engine block. Adjust this bracket by holding the weight of the starter motor. Once the Starter Motor is sitting parallel in the adaptor plate, tighten this bolt and the cap screw. It is **CRITICAL** that the top adjusting bracket is holding the starter parallel & straight in the adaptor plate.